


HAN EV

(4-door model, 2022-)

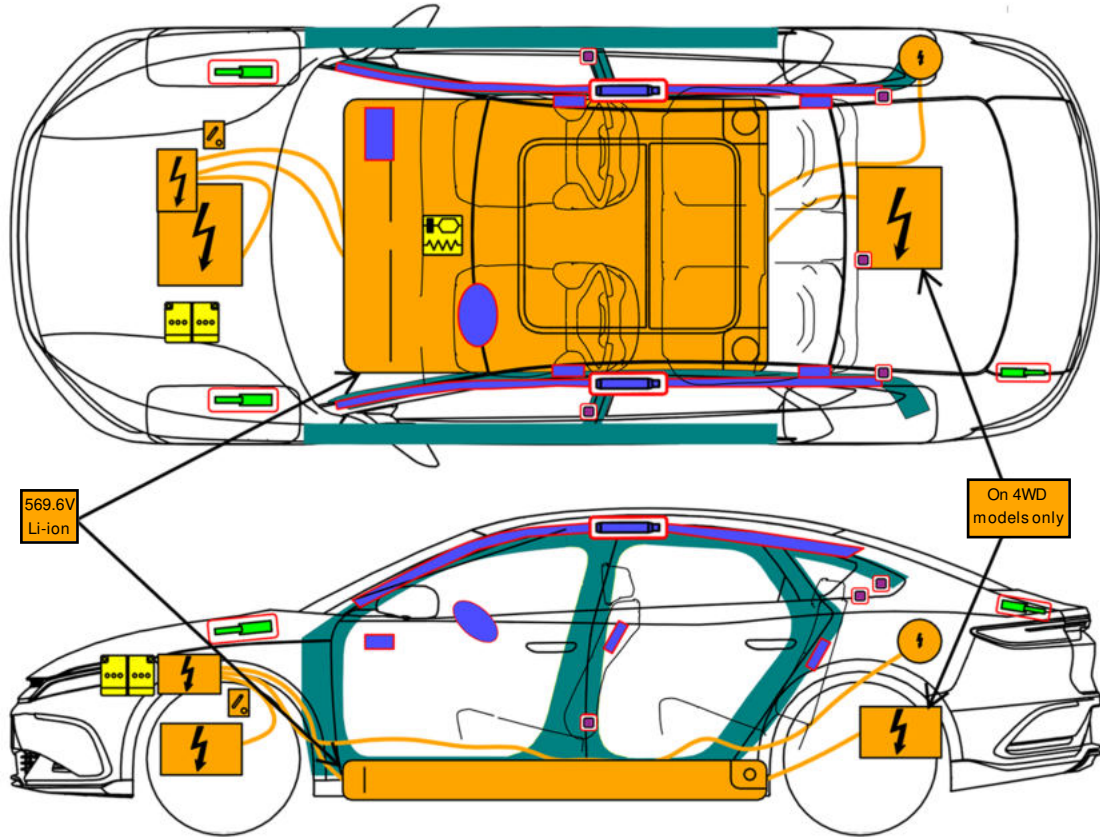

569.6V
Li-ion

On 4WD
models only

	Airbag		Stored gas inflator		Seat belt pretensioner
	Gas strut/Preloaded spring		High strength zone		SRS control unit
	Battery low voltage		High voltage power cable		High voltage component
	Battery pack, high-voltage		High voltage device that disconnects high voltage		

1. Identification/recognition



The electric motor is silent. The OK indicator light on the instrument cluster indicates that the current electric drive system is operational. Wear appropriate PPE.



2. Immobilisation/ stabilisation/ lifting

Immobilising vehicle




Block wheels and engage parking brake

Turn off the ignition



Stabilisation-lifting points

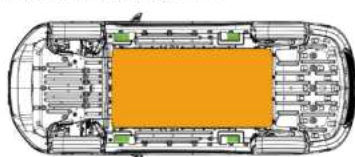

Stabilisation-lifting points

High voltage battery

3. Disable direct hazards/ safety regulations

Turn off the ignition



Press the power button without pressing the brake pedal

Open the hood



Deactivating the high-voltage system



Disconnect the 12V low voltage negative pole (in the engine compartment)

Disconnect from the charging station (emergency release)



Disconnect the connectors (in the engine compartment)



Do not touch, cut or open high-voltage components and high-voltage batteries!
Wear appropriate protective equipment!

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approximately. 60 seconds after deactivation.

4. Access to the occupants

Glass types



A: Laminated glass
B: Tempered glass

Seat adjustment



Steering column adjustment



Door latches/ command



5. Stored energy/ liquids/ gases/ solids

						12V
						569.6V
						R-1234yf 1150 ± 10g



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera.



6. In case of fire



Extinguish the fire using large amounts of water.



BATTERY RE-IGNITION!

7. In case of submersion

After removing the vehicle from the water, shut off the high voltage system (see Chapter 3) and let all water drain out. Appropriate personal protective equipment must be worn during this procedure.

8. Towing/ transportation/ storage

Front hook location



Store at safe distance from other vehicles!



BATTERY RE-IGNITION!

10. Explanation of pictograms used

	High voltage warning		Risk of flammability
	Caution		Risk of corrosive material/ substances
	Use IR Camera (thermal imaging)		Risk of acute toxicity
	Bonnet		Risk of damaging human health
	Use water to extinguish the fire		Risk of explosion
	Low temperature warning		Air-conditioning component